

Intentionally Blank

ALPHABETICAL INDEX

Intentionally Blank

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

A

A (Cont'd)

Access Panels - Interior	1-15 1-17 1-19
Actuator - Clutch (belt tension)	5-23
Actuator - Tow Cart	15-3
Actuator Switches	5-24
Adapter - Gimbal Installation	18-17
Adapter - Oil Filter	4-27B
Adhesive - Carpet	1-7A
Adhesive - Clamp	3-5
Adhesive - Door Seal	2-13 2-17
Adhesive - Foam Grip	7-3A 7-3E 7-9
Adhesive - Grommet	2-32 8-9C 8-42 8-68 9-25 18-13
Adhesive - Insulation	1-9
Adhesive - Moulding	8-11 10-3 18-11
Adhesive - Seal	2-13 2-17 8-50 8-51B 18-19
Adhesive - Seal (fairing)	17-3 17-7 18-2
Adjustable Pedals	7-31B
Air Box Assembly	4-29 4-31B
Air Conditioning	19-1
Air Filter	4-30 4-31B
Airspeed Indicator	8-11 10-5

Alternator	8-37 8-39 8-39D
Alternator Control Unit	8-39H
Ammeter	8-17
Anchor - Seat Belt	1-11
Angle - ELT Mount	9-21
Angle - Headset Holder	8-21 8-21B
	8-23 19-1 19-7
Angle - Radio Installation	8-19
Angle - Vent Door	2-15 2-19
Antenna - DME	8-87 9-32
Antenna - ELT	9-21 9-23D
Antenna - Microwave	17-17
Antenna - Radar Altimeter	9-53
Antenna - Transponder	9-32
Antennas	8-83 thru 8-99
Arm - Alternator	8-37 8-39 8-39E
Arm - Damper	5-15
Arm - Rotor Brake	5-2 5-6
Arm - Swashplate	7-13
Arm - Throttle	4-9
Arm Assembly - Brake (tow cart)	15-9
Arm Assembly - Door	2-15
Arm Assembly - Rotor Brake	5-6
Arm Assembly - Tow Cart	15-1 15-25
Arm Assembly - Vent Door	2-14 2-18
Attitude Indicator	8-11A
Aux Fuel Tank Assembly	8-5

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

B

Back Assembly - Tow Cart	15-9 15-31
Baffle Assembly - Alternator Cooling	8-37 8-39D
Baffle Assembly - MR Gearbox	5-3
Balance Strip - Main Rotor	6-1
Balance Weight - Tail Rotor	6-8
Balancing System (Chadwick)	13-7
Ball - Carb Heat Assist	4-17
Ball - Ground Handling	2-37
Ball Stud - Door	2-15 2-19
Ballast Plate	2-1
Barrier - Instrument Cluster	8-17
Barrier - Vent Door	2-14 2-18
Battery - Sealed Case	8-50 8-51B 8-51C 8-51F 8-61 8-67 8-69D 8-69F
Battery (tow cart)	15-15 15-38
Bead Clamp - Muffler	4-21
Bearing - Clutch Assembly	5-11
Bearing - Cyclic Grip	7-3A 7-3E
Bearing - Cyclic Pivot	7-20 7-21J
Bearing - Elastomeric	6-8
Bearing - Fanshaft	5-23
Bearing - Fork	7-13 7-15B
Bearing - Ground Handling Wheel	3-7 11-5B
Bearing - Main Rotor Hub	6-3
Bearing - Mast Tube	5-3A 7-14

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

B (Cont'd)

Bearing - Tail Rotor Pitch Control	5-17
Bearing - Tail Rotor Hub	6-8 6-11
Bearing - Yoke	7-21B 7-21F
Bearing Assembly - Damper	5-15
Bearing Block - Pedal Assembly	7-31 7-31B
Bearing Tools (elastomeric)	13-5
Bellcrank - Carb Heat Assist	4-17
Bellcrank - Tail Rotor Control	7-35 7-37 7-39
Bellcrank - Tail Rotor Gearbox	5-17
Belly Panel	2-27 8-87 8-89
Belt - Seat	1-11 1-13 9-35
Belt - V (Drive)	5-27
Belt - V (Alternator)	8-37 8-39 8-39E
Belt -V (Air Conditioning Compressor)	19-19
Blade - Main Rotor	6-1
Blade - Tail Rotor	6-7
Blade Support - Main Rotor	9-29
Blind Encoder	9-31 9-32
Block - Battery (spacer; Tow Cart)	15-16 15-38
Block - Bearing	7-31 7-31B
Block - Carb Heat Assist	4-17
Block - Gimbal Installation	18-15
Block - Primer Pump	9-11
Block - Tail Rotor Drive Shaft	5-13
Block - Tail Rotor Guard	2-10
Blocks - Swashplate Rigging	13-1
Block Assembly - Float Gear	11-5

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

B (Cont'd)

B (Cont'd)

Bolt - MR Blade & Hub Attach	6-3
Bolt - Tail Rotor Assembly	6-7
	6-11
Booster - Power	9-55
Boot - Collective	1-15
Boot - Cyclic	7-1
Boot - Main Rotor Blade	6-1
Boot - Swashplate	7-13
Box - Battery	8-50
	8-51B
	8-51C
	8-62
	8-68
	8-69D
	8-69F
Box - Cyclic	7-3
	7-5
Box - Heater Installation	8-41
Box Assy - Elec. Control (tow cart)	15-2
	15-38
Box Assembly - Monitor	17-19
Brace - Pitot Tube	9-25
Brace Assembly - Aft Console	1-17
Bracket (antenna mount)	8-91
	17-17
Bracket - Carburetor	4-13
	4-14
Bracket - Droop Stop	6-3
Bracket - ELT	9-21
	9-23B
Bracket - Lower Bearing Mount	4-41
	5-23
Bracket - Mag Pickup	7-14
	7-15B
Bracket - Rotor Brake	5-6
Bracket - RPM Sensor	5-3
Bracket - Scroll	4-41
Bracket - Servo Mount	7-55
Brake - Rotor	5-2
	5-6
Brake Assembly - Tow Cart	15-9

Breather Tube - Engine	4-25
	4-27D
Buckle Assembly - Seat Belt	1-11
	9-35
Bulb - Digital Clock	9-1
Bulb - Position Light	8-29
	11-9
Bulb - Post Light	7-1
	8-13
	8-17
	10-6
Bulb - Searchlight	18-2
Bulb - Tail Light	8-29
Bulkhead - Aft (MRGB area)	2-32
Bulkhead Adapter - MAP Press. Line	8-76
Bus Bar - Circuit Breaker Panel	8-47
Bus Bar - Ground	8-16
	10-2
Bushing - Charging Post	8-69B
Bushing - Damper Assembly	5-15
Bushing - Gimbal Installation	18-17
Bushing - Primer Line	9-11
	9-15
Bushing - Push-Pull Tube Guide	7-23
Button - Intercom Switch	8-27
Bypass Valve - Oil Cooler	4-27B
	9-8

C

Cable - Antenna	8-83
	thru 8-99
Cable - Battery	8-49
	8-51B
	8-51F
	8-53
	8-57
	8-58
	8-61
	8-62

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

C (Cont'd)

Cable - Battery	8-65 8-67 8-68 8-69B 8-69D 8-69F 8-69H
Cable - Brake (tow cart)	15-12
Cable - Cabin Air Vent	8-45
Cable - Camera Installation	17-9 17-11 17-13 17-15
Cable - Ground	8-81
Cable - Heater Control	8-45 8-45A
Cable - Lever Assy (Pop-Out floats)	11-23
Cable - Mixture Control	4-13 4-19F 8-19
Cable - Tailcone	2-7 8-93
Cable Assembly - VCR	18-11
Camera - Micro	17-9 17-11 17-13 17-15
Cap - Camera Mount	17-15
Cap - Charging Post	8-69B
Cap - Cooling Panel	4-34
Cap - Float Valve	11-17
Cap - Fuel Tank	8-1 8-5
Cap - Hydraulic Line	7-47
Cap - Instrument Light	8-17
Cap - Landing Gear Rain	3-1 11-13
Cap - Tail Rotor Gearbox	5-21
Cap - Windshield Bow	2-21A
Carb Air Temp Gauge	8-16 10-1

C (Cont'd)

Carburetor	4-27 4-30
Carpet	1-7 1-7A
Cartridge Assy - Compressor Drive	19-19
Chain Assembly - Tow Cart	15-7 15-29
Channel - Servo Installation	7-55
Charger - Battery	15-15 15-37
Charging Post - Battery	8-69B
Chin (fiberglass)	2-21A
Chip Detectors	5-2 5-17
Circle Cotter - Battery Installation	8-49 8-51B 8-51F
Circuit Breakers	8-47
Clamp - Airframe Tube	2-5A
Clamp - Antenna Cable	8-83 8-85 8-93 8-97
Clamp - Cable Mount	8-93 11-21
Clamp - Micro Camera Installation	17-9 17-11
Clamp - Carb Heat Assist	4-17
Clamp - Carb Heat Cable	4-13
Clamp - Cooling Hoses	4-33 4-37
	4-39B 4-39G 4-41 4-43 7-44 7-45C 8-49 8-51B 8-51F
Clamp - ELT Installation	9-21
Clamp - Empennage	2-9

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

C (Cont'd)

C (Cont'd)

Clamp - Float Hoses	11-19
Clamp - Fuel Drain	8-6
Clamp - Fuel Hose	4-31F
	4-31J
Clamp - Heater Cable	8-45
Clamp - Horn Wiring	8-15
	10-2
Clamp - Hydraulic Line	7-43
	7-44
	7-45B
	7-45C
Clamp - Ignition Harness	4-26
	4-27E
Clamp - Induction Hose	4-29
Clamp - Main Rotor Blade Boot	6-1
Clamp - MAP Line	8-76
Clamp - Mast Tube	2-3
Clamp - Mixture Cable	4-13
Clamp - Muffler Shroud	4-22
Clamp - Nozzle Assembly	4-43
Clamp - Oil Lines	4-5
Clamp - Pitot/Static Tube	8-71
Clamp - Primer Line	9-11
	9-12
	9-15
Clamp - Relay Installation	8-69H
Clamp - Rotor Brake	5-5
Clamp - Searchlight Installation	18-1
Clamp - Siren Speaker	18-9
Clamp - Strut Fairing	3-5
Clamp - Tailcone (cables)	2-7
	8-93
Clamp - Vent Cable	8-45
	8-45A
Clamp - Vent Tube	8-1
Clamp - VCR Wiring	18-13
Clamp Assembly - Blade Support	9-29
Cleat - Support Strap	9-29
Clevis - Servo Installation	7-55
	7-61
Clip - Access Cover	4-33
Clip - Airbox (IO-540)	4-31B

Clip - Door Assembly	2-15A
	2-18
Clip - Micro Camera Mount	17-9
Clipnut - NAV Antenna Mount	8-91
Clipnut - Attach Plate	4-33
	4-39B
	4-39G
Clipnut - Battery Box	8-69D
	8-69F
Clipnut - Clock Installation	8-17
Clipnut - Floor Switch	8-27
Clipnut - Strut Fairing	3-5
Clock	8-16
	8-16B
	9-1
	10-2
Cluster - Instrument	8-15
Clutch Assembly	5-11
CO Detector	8-17B
Collar - Carb Heat Assist	4-17
Collective Spring Assembly	7-29
Collective Stick Assembly	7-7
Collective Switches	8-79
Compass	8-13
Compressor - Air Conditioner	19-19
Condenser - Air Conditioner	19-23
Connector - Actuator	5-24
	5-25
Connector - Alternator	8-39
Connector - ACU	8-39H
Connector - Cable	5-5
	11-21
Connector - ELT Switch	9-22
Connector - Hydraulic Reservoir	7-44
	7-45C
Connector - Magneto	4-26
	4-27E
	8-33A
Connector - Master Radio Relay	8-33
Connector - Rotor Brake	5-5
Connector - Searchlight Harness	18-1
Connector - Spotlight Installation	8-21B

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

C (Cont'd)

Connector - Tow Cart	15-2 15-3 15-12 15-16 15-19
Connector - Tow Cart	15-23 15-25 15-34 15-38
Connector - Trim Motor	7-2
Connector - VCR Wiring	18-13
Connectors - Antenna Cable	8-93
Console - Aft Cabin	1-17 1-19
Console Assembly	8-11 8-15 9-5 10-1
Control - Cabin Air	8-45
Control - Cabin Heat	8-45
Control - Carb Heat Assist	4-18
Control - Mixture	4-13
Control - Throttle	4-9
Controller - Governor	8-33B
Controller - Trim	7-3
Converter - Power	8-19B 8-19D
Cooler - Oil	4-5 4-7B 4-7D
Cooling Hose	4-33 4-34 4-38 4-39B 4-39G 4-43 7-44 7-45C
Cord - Pop-Out Float Lacing	11-4
Cord Assembly - Cyclic	7-2 7-5A
Cotter Pin - Cabin Air Control	8-45

C (Cont'd)

Cotter Pin - Cyclic	7-3A
Cotter Pin - Ground Wheel	3-7 11-5 11-5B
Cotter Pin - Main Rotor Installation	6-3
Cotter Pin - Pulley	5-5
Cotter Pin - Tail Rotor Gearbox	5-21
Cotter Pin - Vent Door	2-15A 2-19
Counter Weight - Swashplate	7-13
Cover - Antenna Mount	2-7 8-85
Cover - Collective	1-15 9-41
Cover - Cowl Panels	2-23 2-29 2-32
Cover - Cyclic	4-13 7-1
Cover - Floor	1-7A
Cover - Four-Point Harness	9-35 9-37
Cover - Hydraulic Pump Housing	5-1
Cover - Gimbal Removed	17-3 17-7
Cover - Inspection (tailcone)	18-19 2-7
Cover - Instrument Panel	8-11 9-5 10-5
Cover - Pop-Out Float	11-13
Cover - Primer Pump	9-15
Cover - Seat Harness	1-11 1-13 9-37
Cover - Scroll	4-41 4-41B
Cover - Spark Plug Access	4-33 4-38
Cover - Aux Power Socket	4-39B 4-39F 1-17

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

C (Cont'd)

D (Cont'd)

Cover - Spotlight Installation	8-21
	8-21B
Cover - Throttle Linkage	4-10
Cover Assembly - Evaporator	19-7
Cover - Windshields	2-21A
Cover Assy - Police & ENG Equip't.	18-13
Covers - Tunnel	1-15
	1-19
Cowl Panels	2-23
	2-27
	2-29
	2-31
Cradle Assembly - Blade Support	9-29
Crates - Shipping	16-1
	16-3
Cross Tube (landing gear)	3-1
	3-2
Crystal - Instrument Cluster	8-17
Cushion - Pilot	1-5
Cyclic Control System	7-1
	thru 7-3D
Cyclic Grip Assembly	7-3D
	7-3E
	7-3F
	7-3G
Cyclic Friction Assembly	7-5
Cyclic Spring Assembly	7-3
Cylinder Assy - Pop-Out Floats	11-21
	11-21B
Cylinder Head Temp Probe	8-76

Decal - Battery Box	8-51C
	8-51F
	8-61
	8-67
Decal - ELT Switch	9-21
Decal - Float Cylinder	11-21
	11-21B
Decal - Fuel Drain Instructions	1-3
Decal - Gearbox Fill Instructions	1-1
	5-3
Decal - Hardpoint Installation	9-3
Decal - Hourmeter (Collective-Activated)	8-79
Decal - Hydraulic Reservoir	7-43
	7-45C
Decal - Power Outlet	1-17
Decal - Primer Installation	9-11
Decal - Radar Altimeter	9-49
Decal - Scuff Plate	1-7A
Decal - Spotlight Switch	8-21
Decal - Tail Rotor (Danger)	1-1
	1-17
Decal - Tail Rotor Guard	2-10
Decals	1-1
	1-3
Decals - Charging Post	8-69B
Decals - Collective	1-1
	7-7
	7-8
Decals - Cyclic	7-1
	7-3D
	7-3E
Decals - Tow Cart	15-12
	15-38
Deflector - Cabin Heat	8-41
Deflector - Wind	9-45
Detector - Chip	5-2
	5-17
Detector - Carbon Monoxide	8-17B
Deviation Card - Compass	8-13
Deviation Plate - Compass	8-13
Digital Clock	9-1
	10-2

D

Damper - Cyclic	7-1
	7-3D
Damper Assy - T.R. Drive Shaft	5-13
	5-15
Decal - Battery Box	8-49
	8-50
	8-51B

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

D (Cont'd)

Dimmer Assembly	8-17B
Diode Assembly	8-35
	8-53
Diode Assembly	8-57
	8-61
	8-65
	8-67
	8-69H
Dipstick - Oil	4-25
	4-27D
Door - Airbox	4-30
Door - Cowl	2-23
	2-29
	2-31
Doors - Cabin	2-13
	2-17
Doubler - Antenna	8-87
Doubler - ELT Antenna Installation	9-21
	9-23D
Doubler - Tailcone	2-7A
Doubler Plate - Antenna	8-89
Dowel Pin - Damper Assembly	5-15
Drain - Chin	11-10
Drain - Gascolator	8-2
Drain Assembly	8-6
Drain Plug - Landing Gear	11-1
	11-13
Drain Plug - Pitot Tube	8-71
Drain Tool - Main Rotor Gearbox	13-1
Drain Tube - Battery Box	8-62
	8-68
Drain Tube - Evaporator	19-11
Drain Valve - Fuel	4-31L
	8-2
	8-5
Drain Valve - Oil	4-26
	4-27E
Drive Shaft - Tail Rotor	5-13
	5-13A
Droop Stop	6-3
Drum - Tow Cart Brake	15-9
	15-31

E

Duct - Heater	8-41
Duct Assembly - Air Conditioner	19-1
Elastic Cord - Flight Controls	7-2
	7-5A
	7-27C
	7-35
Elbow - Aux Tank Fuel Line	8-2
	8-5
Elbow - Carburetor	8-2
Elbow - Hydraulic Lines	7-45B
	7-59
Elbow - Landing Gear	3-1
	11-13
Elbow - Oil System	4-5
	4-7D
	9-7
Elbow - Pitot Tube	8-72
Elbow - Primer Pump	9-11
ELT Installation	9-21
	9-23B
Engine Components	4-25
	4-27D
Engine Manual	13-1
Empennage	2-9
End Cap - Collective	7-8
End Cap - Cyclic	7-3A
End Cover - Main Rotor Gearbox	5-2
Engine Mounts	4-1
	4-3
	4-25
	4-27D
Engine Oil	14-1
Escutcheon (fuel primer control)	9-15
Evaporator Assy - Air Conditioner	19-7
Exhaust System	4-21
Extended Landing Gear	3-1
Extension - Skid	3-2
	11-1
Extension - Valve	15-7
	15-29
Extinguisher - Fire	9-19

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

F

Eye Bolt - Blade Strut	9-29
Face - Lower Console	8-19
Face - Upper Console	8-11
	9-5
Face - Upper Console	10-1
	10-6
Fairing - Gimbal	17-3
	17-5
	17-7
	18-19
Fairing - Mast	2-3
Fairing - Strut	3-5
Fan Shaft Bearing	5-23
Fanwheel Assembly	5-27
Fill Gun - Float PSI Gage and (utility)	11-2
Filler Plug - Hydraulic Reservoir	7-43
	7-45B
Filler Plug - Main Rotor Gearbox	5-2
Filler Plug - Tail Rotor Gearbox	5-17
Filter - Hydraulic Reservoir	7-43
	7-45C
Filter - Oil	4-27B
	9-8
Fitting - Airspeed Indicator	8-71
Fitting - Condenser	19-23
Fitting (elbow)	4-31L
Fitting - Manifold Pressure Line	8-76
Fitting - Main Rotor Gearbox	5-3
Fitting - Pitot Tube	8-71
Fire Detection Switch	8-75
Fire Extinguisher	9-19
Flash Tube - Strobe	8-31
Flathead Pin	7-31
	7-31B
Flex Plates	5-9
	5-13
Float - Landing Gear	11-1
	11-13
Float - Pop-Out	11-17
	11-17B
Float Ground Wheels	11-5
	11-5B

F (Cont'd)

Float Repair Kit	11-2
	11-17
Float Stabilizer	11-7
Fluid - Hydraulic	7-43
	7-45C
Foam - Insulation	1-9
Foam Grip - Collective	7-7
Foam Grip - Cyclic	7-2
	7-3D
	7-3E
	7-3F
Foam Pad - Harness Installation	9-35
Foil (Aluminum) Tape	2-29
	4-30
	4-33
	4-39B
	4-39G
	4-41
	8-42
	15-2
Fork Assembly - Cyclic Torque Tube	7-21F
Fork Assembly - Swashplate	7-13
Frame Assembly - Helicopter	2-5
	2-5A
Fuel Control	4-19F
	4-31F
Fuel Drain Valve	4-31L
	8-2
	8-5
Fuel Line Assembly	8-2
	8-5
Fuel Mixture Control	4-13
	4-19F
Fuel Primer Installation	9-11
	9-15
Fuel Pump - Mechanical	4-31L
Fuel Quantity Sender	8-1
	8-5
Fuel Return Line Assembly	4-31J
Fuel Tanks	8-1
	8-5
Fuel Valve	8-9

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

F (Cont'd)

Fuse - Actuator	5-24 8-75
Fuse - Diode Assembly	8-53 8-62 8-65 8-68
Fuse Block	8-35 8-35A
Fuse Holder	8-75 8-77B

G

Gage - Float	11-2
Gages	8-16 10-1
Gages - Sight	5-1 5-17 7-43 7-45B
Gang Channel - Door Post	9-35
Gang Channel - Fuel Tank	8-5
Gang Channel - Mast Fairing	2-3
Gas Spring - Cabin Doors	2-15 2-18
Gascolator	8-2
Gasket - Bypass Valve	4-27B 9-8
Gasket - Carburetor	4-27 4-29
Gasket - Engine Oil Filter Adapter	4-27B 9-8
Gasket - Fuel Cap	8-1 8-6
Gasket - Fuel Sender	8-1 8-5
Gasket - Gascolator	8-3
Gasket - Low Fuel Switch	8-2
Gasket - Oil Suction Screen	4-26 4-27E
Gasket - Oil Temp Sender	8-75 9-7

G (Cont'd)

Gasket - Oil Port Cover	9-8
Gasket - Position Light	8-29 11-9
Gasket - Rocker Arm Covers	4-25 4-27D
Gasket - Screen Housing	4-26
Gasket - Strobe Light	8-31
Gasket - TR Gearbox Fill Vent Plug	5-18
Gearbox - Main Rotor	5-1
Gearbox - Tail Rotor	5-17
Gearmotor - Actuator	5-23
Gearmotor - Trim	7-2
Gimbal - ENG Helicopter	17-1 17-5
Gimbal - Police Helicopter	18-17
Gimbal Assembly - Searchlight	18-1
Governor Assembly	7-9
Governor Controller	8-33B
Grease - Foot Pedals	7-31 7-31C
Grease - Ground Handling Wheel	3-7 11-5B
Grip - Foam (cyclic)	7-2 7-3D 7-3F
Grip - Foam (tow cart)	15-11 15-33
Grip Assembly - Cyclic	7-1 7-3E 7-3F 7-3G
Grip Assembly - Police Version	7-3F
Grommet - Antenna Installation	8-85
Grommet - Battery Box	8-49 8-51B 8-51F
	8-61
	8-62
	8-67
	8-68
	8-69D
	8-69F

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

G (Cont'd)

G (Cont'd)

Grommet - Bulkhead	2-32
Grommet (cable)	8-42
Grommet (cable)	8-45
	17-11
	17-15
	18-13
Grommet - Compass	8-13
Grommet - Empennage	2-9
Grommet - Heated Pitot Tube Assy	9-25
Grommet - Heater Duct	8-41
	8-42
Grommet - Keel Panel	8-72
Grommet - LED Spotlight Installation	8-21B
Grommet - Mast Fairing	2-3
Grommet - Push Rod	4-33
	4-37
	4-39B
	4-39G
Grommet - Searchlight Installation	18-1
Grommet - Tailcone	2-7
	2-7A
	8-69D
	8-69F
Grommet (wiring)	2-7
	2-9
	7-3D
	18-1
	18-13
Ground Cable (alternator)	8-39
	8-39D
Ground Cable (battery)	8-49
	8-51B
	8-51F
	8-62
	8-67
	8-69D
	8-69F
Ground Handling Ball	2-37
Ground Handling Wheel Assembly	3-7
Ground Handling Wheel Assy - Float	11-5
	11-5B
Ground Strap (engine)	8-81

Guard - Air Inlet	4-29
	4-31B
Guard - Battery Relay	8-53
	8-57
	8-58
Guard - Clutch Switch	8-16
Guard - Mixture Control	4-14
	4-19F
Guard - Rotor Brake	5-6
Guard - Tail Rotor	2-10
Guide - Push-Pull Tubes	7-23

H

Handle Assembly - Tow Cart	15-11
	15-33
Handle Pin - Cyclic	7-1
	7-3D
	8-25
Hanger - Headset	8-21
	8-23
	19-1
	19-7
Hardpoint Hinge Kit	9-3
Harness - Blind Encoder	9-31
Harness - ELT Installation	9-22
	9-23B
Harness - Four-Point	9-35
Harness - Ignition	4-26
	4-27E
Harness - Seat Belt	1-11
	1-13
	9-35
Harness - Wire (searchlight)	18-2
Harness Assembly - Cyclic Trim	7-3
Harness Assembly - MR Gearbox	5-1
	5-2
	5-3
Harness Assembly - Rotor Brake	5-5
Harness Assembly - Tow Cart	15-1
	15-2
	15-4

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

H (Cont'd)

Harness Assembly - Tow Cart	15-11
	15-15
	15-20
	15-25
	15-26
	15-33
	15-37
Harness Plate - Ignition Wires	4-25
Headliner	1-9
	19-1
Heat Assist - Carburetor	4-17
Heat Shrink - Connector	5-5
	5-24
	8-33
	18-1
Heat Shrink - Fuse Holder	8-75
	8-77B
Heat Shrink - Hoses (floats)	11-17
	11-17B
Heat Shrink - Oil Lines	4-5
Heat Shrink (wire terminals)	8-17
	8-21
	8-21B
	8-37A
	8-39B
	8-39D
	8-53
	8-61
	8-67
	8-69H
	8-75
8-79	
Heated Pitot Installation	9-25
Heater Installation	8-41
	8-43B
Hinge - Air Box	4-30
Hinge - Cabin Doors	2-13
	2-17
	2-18
	2-23
Hinge - Cowl Door	2-23
	2-29
	2-31

H (Cont'd)

Hinge - Cowl Door	2-32
	15-15
	15-37
Hole Plug - Cabin	3-2
	8-47
Hole Plug - C.B. Panel	8-11A
	8-19
Hole Plug - Console	8-19
	9-5
Hole Plug - Door	10-3
	2-14
Hood - Aft Monitor	17-19
Horn Assy - Low RPM Warning	8-15
	10-2
Hose - Air Induction	4-29
	4-30
Hose - Alternator Cooling	4-34
	8-37
Hose - Battery Cooling	8-39D
	8-49
Hose - Cabin Heater	8-51B
	8-51F
Hose - Cooling	8-41
	8-42
	4-33
	4-38
Hose - Float Cylinder	4-39B
	4-39G
Hose - Fuel	4-43
	11-21
Hose - Fuel Return	11-21B
	4-31F
Hose - Magneto Cooling	8-2
	8-9B
Hose - Oil Filter Installation	4-31J
	4-33
Hose - Oil Pressure Sender	4-38
	4-39B
Hose Assembly - Fuel	4-39G
	9-7
Hose Assembly - Pop-Out Float	4-6
	8-2
	11-17

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

H (Cont'd)

Hose Assembly - Pop-Out Float	11-17B 11-19
Hoses - Heater	8-41 8-42 8-43B
Hourmeter	8-17 8-79
Housing - Oil Pressure Screen	4-26
Hub - Main Rotor	6-3
Hub Assembly - Tail Rotor	6-7 6-11
Hydraulically-Boosted Flight Controls	7-43 thru 7-63

I

Ignition Harness	4-26 4-27E
Ignition Switch	8-17 10-1
Indicator - Airspeed	8-11 10-5
Indicator - Radar Altimeter	9-47 9-49
Indicator - Rate of Climb (VSI)	8-11 10-5
Indicator - Telatemp	1-1 5-1 5-11 5-21 7-47
Injector - Fuel Primer	9-11
Inlet - Air Induction	2-24
Inlet - Heater Installation	8-41
Inner Wire - Carb Heat	4-18
Inner Wire - Mixture Control	4-14
Input Cartridge - TR Gearbox	5-21
Instrument Cluster	8-15 10-2
Instrument Nut	8-11 8-11A 8-16

I (Cont'd)

Instrument Nut	9-32 10-5 10-6
Insulation - Cabin	1-9
Insulation - Firewall	1-9
Insulation - Heater Installation	8-41
Insulator - Charging Post	8-69B
Intercom System	8-25 8-27
Interrupter - Swashplate	7-14

J

Jack - External Audio Input	1-17
Jack - Intercom	8-23 19-7
Jack - Tailcone Bulkhead	8-93
Jackshaft Assembly	7-11 7-49
Journal - Aft Support	7-25
Journal - Actuator Upper Bearing	5-23
Journal - Bellcrank	7-25 7-27B 7-35 7-37
Journal - Damper Assembly	5-15
Journal - Main Rotor Installation	6-3
Jumper Tab - Terminal Block	8-15 10-3

K

Key - Duplicate (door)	2-15A
Key - Duplicate (ignition)	8-17
Key - Swashplate	7-13 7-15B
Kit - Oil Filter	4-27B
Kit - Spare Parts	12-1
Knob - Cyclic Friction	7-5
Knob - Dimmer	8-16 10-2
Knob - Fuel Valve	8-9

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

K (Cont'd)

Knob - Rotor Brake	5-5 19-25
Knob - Vent Door	2-14 2-18

L

Lamp - Compass	8-13
Lamp - Digital Clock	9-1
Lamp - Landing Light	8-29D 8-29F
Lamp - Position Light	8-29 8-29A 11-9
Lamp - Post Light	7-1 8-11 8-15 10-3 10-5
Lamp - Searchlight	18-2
Lamp - Spotlight	8-21
Lamp - Tail Light	8-29
Lamp - Warning Lights	8-11 10-3 10-6
Landing Gear	3-1
Landing Gear - Float	11-1 11-13
Landing Light	8-29D 8-29F
Lap Belt - Harness	1-11 1-13 9-35
Lap Belt - Harness	9-39
Latch - Blade Support Clamp	9-29
LED - Spotlight	8-21B 19-4
Lens - Micro Camera	17-9 17-11 17-13 17-15
Lens - LED Spotlight	8-21B

L (Cont'd)

Lever - Collective Friction	7-7
Lever - Ground Wheel	3-7 11-5B
Lever Assembly - Pop-Out Float	11-23
License Holder	1-7A
Light - Position	8-29 8-29A 11-9
Light - Post	7-1 8-11 8-17
Light - Post (Switch Panel)	10-2 10-6 8-16
Light - Tail (incandescent)	10-1 8-29
Light - Tail (LED)	8-29A
Light Assembly - Tow Cart	15-1 15-26
Light Bar - Compass	8-13
Lighter	1-17
Line - Fuel	8-2 8-5
Line Assembly - Air Conditioner	19-13 19-15 19-17
Line Assembly - Fuel Primer	9-11 9-12 9-15
Liner Assembly - Skid	3-1 11-13
Link - Alternator/Starter	8-37A 8-39 8-39B 8-39E
Link - Brake (tow cart)	15-9
Link - Chain (connector)	15-7
Link - Engine Mount	4-3
Link - Main Rotor Pitch	7-13
Link - Cyclic Friction	7-5
Link - Tail Rotor Pitch	6-7
Lip - Scroll	4-41

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

L (Cont'd)

Lock Set - Door	2-14
Locking Pin - Adjustable Pedals	7-31B
Locking Tab - Carb Bolt	4-14
Lockwasher - Primer Pump	9-15
Logic Module Assembly (fuel pump)	8-33
Louver - Duct Assy (air conditioning)	19-1
Low Fuel Switch	8-2
Lower Frames (steel tube)	2-5 2-5A
Lower Sheave	5-27
Lubricants	14-1

M

Magnet - Yoke	5-3
Magnetos	4-26 4-27E
Main Rotor Blade	6-1
Main Rotor Blade Support	9-29
Maintenance Tools	13-1 13-3 13-5 13-7
Manifold - Intake	4-31G
Manifold Pressure Line	8-76 8-77B
Mast Assembly	5-1 5-3A
Mast Fairing	2-3
Master Radio Relay	8-33
Micro Camera	17-9 17-11
Micro Camera	17-13 17-15
Mirror Assembly - Tow Cart	15-1 15-20
Mixture Control - Cable	4-13 4-19F 8-19
Motor - Cyclic Trim	7-2
Motor Assembly - Tow Cart	15-3 15-7

M (Cont'd)

Motor Assembly - Tow Cart	15-20 15-29
Moulding - Console	8-11 9-5 10-1
Moulding - VCR Tray	18-11
Monitors - Aft	17-19
Mount - Compass	8-13
Mount - Engine	4-1 4-3 4-25 4-27D
Mount - MR Gearbox	5-3
Mount - Strobe Light	2-7A
Mount - Tail Light	2-9
Mount - VCR Installation	18-11
Mount Assembly - Gimbal Cineflex)	17-5
Mount Bracket - ELT	9-21 9-23B
Muffler Assembly	4-21

N

Nipple - Alternator Installation	8-37 8-39 8-39D
Nipple - Battery Installation	8-51F
Nipple - Battery Relay	8-53 8-57 8-61 8-65 8-67 8-69H
Nipple - Fuel Line	8-2
Nipple - Oil Pressure Sender	4-6
Nipple - Shunt	8-35
Nipple - Starter	8-37A 8-39B
Nozzle Assembly - MRGB	4-43
Nut - Main Rotor Blade	6-1
Nut - Main Rotor Hub	6-3
Nutplate - Airbox	4-31B

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

N (Cont'd)

Nutplate - Console	8-19
Nutplate - Cowl Panel	2-24
	2-29
Nutplate - Mast Fairing	2-3
Nutplate - Scroll Bracket	5-23

O

OAT Gauge	8-19
OAT Probe	8-75
Oil - Engine	14-1
Oil - Main Rotor Blade	6-1
Oil - Main Rotor Gearbox	5-3
Oil Coolers	4-5
	4-7B
	4-7D
Oil Filter	4-27B
	9-8
Oil Filter Kit	4-27B
	9-8
Oil Lines	4-5
	4-7B
	4-7D
Oil Pressure Sender	4-5
Oil Screen	4-26
	4-27E
Oil Temp Sender	4-27
	4-27B
	8-75
	9-7
O-Ring - Actuator Gearmotor	5-24
O-Ring - Blind Encoder (B240-1)	9-32
O-Ring - Micro Camera Installation	17-15
O-Ring - Chip Detector	5-2
	5-3A
O-Ring - Clutch Assembly	5-11
O-Ring - Drain Plug	11-1
	11-13
O-Ring - Fuel Control	4-31F
O-Ring - Fuel Drain	8-2
	8-6

O (Cont'd)

O-Ring - Primer Fuel Line Bushing	9-12
	9-16
O-Ring - Gearmotor	5-24
O-Ring - Hydraulic System	7-43
	7-45B
	7-45C
	7-47
	7-56
	7-59
	7-59B
O-Ring - LED Installation	8-21B
O-Ring - Main Rotor Gearbox	5-1
	5-2
	5-3
	5-3A
O-Ring - OAT Probe	8-75
O-Ring - Primer Pump	9-12
	9-16
O-Ring - Sump	5-2
O-Ring - Tail Rotor Gearbox	5-21
O-Ring - VSI (or IVSI)	8-71
Overtemp Switch Harness Assembly	5-2
Overtravel Spring Assy - Collective	4-9
	4-19B

P

Packing - O-Ring	7-43
	7-45B
	7-45C
	7-47
	7-56
	7-59
	7-59B
	8-9B
	8-71
Packing - O-Ring	9-7
Packing - VSI (or IVSI)	8-71
Pad - Battery Box	8-50
	8-51C
Palnut - Engine Mount	4-1
	4-3

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

P (Cont'd)

Panel - Circuit Breaker	8-47
Panel - Test Switches	8-75
	8-77B
Panels - Belly	2-27
Panels - Engine Cooling	4-33
	4-34
	4-37
	4-38
	4-39B
	4-39C
	4-39F
	4-39G
Panels - Fuselage	2-23
	2-31
	2-35
Panels - Interior	1-15
	1-17
	1-19
Passenger Safety Card	1-19
Patent Plate	1-3
Pedal Assembly	7-31
	7-31B
	7-31C
Pedal Cover	7-33
Pedals - Adjustable	7-31B
Pin - Connector	2-7
	5-24
	7-3
	7-9
	7-44
	7-45C
	8-9B
	8-17B
	8-21
	9-21
Pin - Damper Assembly	5-15
Pin - Fan Installation	5-27
Pin - Locking	7-1
	7-3D
	7-31
Pin - Locking	7-31B
	9-29

P (Cont'd)

Pin - Vent Door (cotter)	2-15A
	2-19
	8-45
Pistol Grip - Cyclic	7-3D
Pitch Control - Tail Rotor	5-18
Pitch Link - Swashplate Assy	7-13
	7-14
Pitch Link - Tail Rotor Assembly	6-7
Pitot Tube	8-71
Pitot Tube - Heated	9-25
Pivot Assembly - Cyclic	7-20
	7-21C
	7-21G
	7-21J
Plate - Ballast	2-1
Plate - Fanshaft Bearing Mount	4-41
	5-23
Plate - Cyclic Switches	7-3D
	7-3E
	8-25
Plate - Door Frame	2-13
	2-17
Plate - Gimbal Inst'l	18-15
Plate - Horn Mount	8-15
	10-2
Plate - Ignition Harness	4-25
	4-27D
Plate - Primer Pump	9-11
Plate - Scroll	4-41
	5-23
Plate - Siren Speaker Inst'l	18-5
	18-9
Plate Assy - Oil Filter Inst'l	9-7
Plug - Antenna Cable	8-83
	thru 8-99
Plug - Clutch Assembly	5-11
Plug - Console	8-11A
	8-19
	9-5
	9-32
	10-3

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

P (Cont'd)

Plug - Converter	8-19B 8-19D 8-19F
Plug - Governor Controller	8-33B
Plug - Cyclic Cover	7-3
Plug - Cyclic Grip Assy (plastic)	7-3D 7-3F
Plug - Cyclic Grip Assy (electrical)	8-25
Plug - Hole (cabin)	3-2
Plug - Hole (console)	8-11A 8-19 9-5 10-3
Plug - Hub Bearing Tool	13-5
Plug - Drain (Pitot/Static Installation)	8-71
Plug - Searchlight (connector)	18-2
Plug - Skid Extension	11-1 11-13
Plug - VCR Cable	18-11
Plug Assembly - Tailcone	2-7
Pocket - Fire Extinguisher	9-19
Position Lights	8-29 11-9
Post Light	7-1 8-11 8-17 10-2 10-6
Power Converter	8-19B 8-19D
Power Supply - Strobe	8-31
Pressure Switch - Oil	4-6
Primer Pump (fuel)	9-11 9-15
Probe - Carb Air Temp	4-27
Probe - Cylinder Head Temp	8-76 8-77B
Probe - Outside Air Temp	8-75
Pulley - Alternator	8-37 8-39 8-39E
Pulley - Rotor Brake	5-5

P (Cont'd)

Pulley - Rotor Brake	8-5 19-25
Pump - Fuel	8-9B
Pump - Fuel Primer	9-11 9-15
Pump - Hydraulic	7-47
Push-Pull Tube (carb assist)	4-17
Push-Pull Tube (MR flight controls)	7-19 7-20 7-21C 7-21F 7-63
Push-Pull Tube (TR flight controls)	7-27C 7-31
Push-Pull Tube (throttle)	7-31B 7-35 7-37 7-39
Push-Pull Tube (throttle)	4-10 4-19C

Q

Quantity Sender - Fuel	8-1 8-5
------------------------	------------

R

Radar Altimeter	9-51
Radio Installation	8-19
Rain Cap - Landing Gear	3-1 11-13
Receptacle (connector)	18-2
Receptacle Assembly - Cowl	2-23 2-29 2-31
Relay - Battery	8-53 8-57 8-61 8-65 8-67

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

R (Cont'd)

R (Cont'd)

Relay - Battery	8-69B
	8-69H
Relay - Fuel Pump	8-33
Relay - Landing Light	8-33
Relay - Master Radio	8-33
Repair Kit - Float	11-2
Resistor - Low RPM Horn	8-15
	10-1
Resistor - LED Switch Assembly	8-21B
Restraint - Forward Doors	2-21A
Retainer - Clutch Assembly	5-11
Retainer - Cooling Panel	4-33
	4-34
	4-38
	4-39B
	4-39G
Retainer - Landing Light	8-29D
Retainer Strip - Windshield	2-21
	2-21A
Retaining Ring	17-15
Rheostat - Panel Light	8-16
	10-3
Rib - Mast Fairing	2-3
Ring - Aft Cowling	2-29
Ring - Collective Boot	1-15
Ring - Cotter	2-13
	2-17
Ring - Horn Installation	8-15
	10-3
Ring - Retaining	7-29
	13-3
Ring - Tie-Down	9-3
Rivet - Clamp (camera)	17-11
Rivet - Harness Tube Support	9-35
Rivet - Pocket (Fire Extinguisher)	9-19
Rivet - Push (aft battery Installation)	2-5A
	8-51F
Rivet - Stabilizer	2-9
Rivnut	3-1
	11-1
Rod - Battery Box	8-50
	8-51C

Rod - Battery Box	8-51F
Rod End - Collective	7-27C
Rod End - Engine Mount	4-3
Rod End - Flight Controls	7-19
	7-21B
	7-21F
Rod End - Gimbal Installation	17-1
Rod End - Hard point Installation	9-3
Rod End - Hydraulic Controls Inst'l	7-49
	7-53
	7-63
Rod End - Centering Strut	5-11
Rod End - Collective Spring Assy	7-29
Rod End - Swashplate	7-13
	7-15B
Rod End - Tail Rotor Control	7-31
	7-31B
	7-35
	7-37
	7-39
Rod End - Tow Cart	15-3
Roll Pin - Cyclic	7-3A
Roll Pin - Cyclic Friction	7-5
Roll Pin - Throttle	4-9
Roller - Push-Pull Tube Guide	7-23
Rotor Blades	6-1
	6-7
	6-8
Rotor Brake	5-6
Rub Strip - Door	2-13

S

Safety Wire - Alternator Installation	8-37
	8-39
	8-39D
Safety Wire - Fan Installation	5-27
Safety Wire - Gearboxes	5-1
	5-17
Safety Wire - Oil Filter Installation	4-27B
	9-8

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

S (Cont'd)

Safety Wire - Cooling Panel Screws	4-34 4-37
Safety Wire - Searchlight Installation	18-1
Safety Wire - Speaker	18-5
Safety Wire - Starter	8-39B
Scissor - Servo Installation	7-61
Scoop Assembly - Carb Heat	4-29
Screen - Air Inlet	4-29 4-30 4-31B
Screen - Fuel Filter (fuel control)	4-31F
Screen - Gascolator	8-3
Screen - Oil	4-26 4-27E
Scroll Assembly	4-41 4-41B
Scuff Plate - Carpet	1-7
Seal - Battery Box	8-49 8-51B 8-61 8-67
Seal - Cabin Doors	2-13 2-14 2-17 2-18
Seal - Clutch Shaft	5-11
Seal - Cowling	2-29 2-35
Seal - Gimbal Fairing	17-3 17-7 18-19
Seal - MR Gearbox Drive Pinion	5-2
Seal - Peripheral (connector)	18-2
Seal - Scroll Assembly	4-41
Seal - Searchlight (cable entry)	18-1
Seal - TR Gearbox	5-21
Seal - Throttle	4-10
Seal - Throttle	4-19B
Seal - VCR Tray	18-11
Seal - Vent Door	2-14 2-18
Seal Assembly - Gimbal Fairing	17-3

S (Cont'd)

Seal Assembly - Gimbal Fairing	17-7
Sealant - Control Cables	4-13
Sealant - Door Restraint	2-22
Sealant - Float Installation	11-1 11-14
Sealant - Fuel System Fittings	8-2 8-6
Sealant - Heater Installation	8-41
Sealant - Oil Cooler Installation	4-5 4-7B 4-7D
Sealant - Static Fitting	8-72
Sealant - Windshield	2-21
Searchlight Assembly	18-1
Seat Belts	1-11 1-13
	9-35 9-39
Seat Cushion	1-5
Seat Harness	1-11 1-13
	9-35 9-39
Seats	1-5
Sender - Fuel Quantity	8-1 8-5
Sender - Oil Pressure	4-5
Sender - Oil Temperature	8-75 9-7
Sender - RPM (hall effect)	5-3
Servo - Hydraulic	7-55 7-61
Set-Up Box - Trim	13-3
Shaft - Clutch	5-11
Shaft - Main Rotor Drive	5-1
Shaft - Tail Rotor Drive	5-13A
Shear Rivet	11-23
Sheave - Lower	5-27
Sheave - Upper	5-11
Shield - Battery Box	8-50 8-51B
Shield - Battery Relay	8-69H

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

S (Cont'd)

Shield - Muffler	4-22
Shim - MR Gearbox Installation	5-3
Shim - Main Rotor Installation	6-3
Shim - Servo Installation	7-55
Shim - Swashplate Installation	7-15B
Shipping Crates	16-1
	16-3
Shoe - Skid	3-1
	11-1
	11-13
Shroud - Muffler	4-22
Shroud Weldment- Alternator	8-37
	8-39D
Shunt - Ammeter	8-35
Sight Gage - Gearboxes	5-1
	5-17
Sight Gage - Hydraulic Reservoir	7-43
	7-45B
Siren Speaker	18-5
	18-7
Skid - Tail	2-10
Skid Extension - Landing Gear	3-2
	11-1
	11-13
Skid Shoes	3-1
	11-1
	11-13
Skid Tube	3-1
	11-1
	11-13
Slass Sensor (searchlight)	18-2
Slat - Aft Cowling	2-29A
Sleeve - Push-Pull Tube	7-20
Sleeving - Speaker Wiring	18-5
	18-9
Sleeving - Tow Cart Wiring	15-12
	15-34
Sleeving - VCR Wiring	18-13
Slider Tube Assembly - Swashplate	5-1
Slider Valve - Air Box	4-13
Slider Valve - Cabin Heat	8-42
Snubber Assembly - Air Cond.	19-20

S (Cont'd)

Socket (housing)	2-7
	5-24
	7-44
	7-45C
	9-21
Socket - Connector (searchlight)	18-2
Socket - Electrical (aux power)	1-17
Solenoid Assembly - Tow Cart	15-1
	15-5B
	15-25
Spacer - Airbox Door	4-30
Spacer - Battery Shield	8-50
	8-51B
Spacer - Blind Encoder Installation	9-31
Spacer - Cyclic Pivot	7-3A
	7-21J
Spacer - Cyclic Friction	7-5
Spacer - Empennage	2-9
Spacer - Landing Gear	3-1
Spacer - Main Rotor Blade Assy	6-1
Spacer - Main Rotor Gearbox	5-2
	5-3
Spacer - Micro Camera Installation	17-13
Spacer - Pitot Fitting	8-72
Spacer - Primer Pump Line	9-15
Spacer - Push-Pull Tube Guide	7-23
Spacer - Rotor Brake	5-2
	5-5
Spacer - Seat Harness	1-11
	1-13
	9-39
Spacer - Spindle Boot Adjustment	13-3
Spacer - Tail Rotor Assembly	6-7
	6-11
Spacer - Tow Cart	15-2
Spacer - Tow Cart	15-19
Spacer - Trim Motor	7-3
Spacer - Windshield Installation	2-21A
Spare Parts Kit	12-1
Spark Plug	4-25
	4-27D
Speaker - Siren	18-5

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

S (Cont'd)

Speaker - Siren	18-9
Spindle Assembly	6-1
Spirap - Battery Cable	8-61
	8-65
Spirap - Cable (vent/heat)	8-45A
Spirap - Searchlight Wiring	18-2
Spirap - Test Switch Wiring	8-75
	8-77B
Splice - Wire	8-79
Spotlight Assembly	8-21
	8-21B
	19-4
Spring - Airbox Door	4-30
	4-31B
Spring - Carb Heat Assist Catch	4-17
Spring - Tow Cart Brake	15-9
	15-31
Spring - Tow Cart Handle	15-12
	15-34
Spring - Collective	7-29
Spring - Cyclic Grip Assembly	7-3E
Spring - Gas	2-15
	2-18
Spring - Panel Retainer	4-33
	4-38
	4-39B
	4-39G
Spring - Rotor Brake	5-2
	5-6
Spring - Vent Tube	8-1
Spring Assembly - Collective	7-29
Spring Assembly - Lat Cyclic Trim	7-3
Spring Assembly - Mixture Control	4-14
Spring Assembly - Overtravel	4-9
	4-19B
Spring Pin - Fan Installation	5-27
Spring Washer (door vent)	2-15A
	2-18
Sprocket - Tow Cart Chain	15-7
	15-29
Stabilizer - Float	11-7
Stabilizers	2-9

S (Cont'd)

Starter	8-37A
	8-39B
Starter Cable	8-37A
	8-39B
Start Booster - Magneto	8-33B
Stem - Carb Heat Assist	4-17
Stiffener - Console	8-19
Stiffener - Panel	2-23
	2-29
Stiffener - Windshield	2-21
Stop - Clutch Assembly	5-11
Strainer - Fuel	8-2
	8-5
Strap - Aft Seat Support	2-5A
	2-39
Strap - Battery	8-68
	8-69D
	8-69F
Strap - ELT Unit	9-21
Strap - Oil Cooler Installation	4-7B
	4-7D
Strap - Pilot Handbook	1-7
Strap - Radio Installation	8-19
Strip - Float Installation	11-1
	11-13
Strip - Balance	6-1
Strobe Light	8-31
Strut - Cabin Doors	2-15
	2-18
Strut - Extended Gear	3-2
Strut - Frame	2-5
	2-5A
Strut - Landing Gear	3-1
Strut - Upper Bearing Centering	5-11A
Strut Assembly - Blade Support	9-29
Strut Weldment - Jackshaft	7-11
Stud - Charging Post	8-69B
Stud - Cowl Door	2-23
	2-29
	2-31
Stud - Pump Installation	7-47

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

S (Cont'd)

Stud - Scuff Plate	1-7
Stud - Tail Rotor Gearbox	5-17
Sump - Main Rotor Gearbox	5-2
Support - Aft Seat	2-39
Support - Aft Servo	7-55
Support - Bellcrank	4-9
	4-19C
Support - Cylinder Installation	11-21
	11-21B
Support - Engine	4-3
Support - Forward Servos	7-61
Support - Fuel Pump	8-9C
Support - Gascolator	8-2
Support - Gimbal Installation	18-15
Support - Hub Bearing Tool	13-5
Support - Jackshaft Installation	7-49
	7-53
Support - Oil Cooler	4-5
	4-7B
Support Assy - Aft Bellcrank (flight controls)	7-25
	7-27B
Swashplate Assembly	7-14
	7-15B
Switch - Aft Monitor Installation	17-19
Switch - Collective	8-79
Switch - Cyclic	7-1
	8-25
Switch - ELT	9-21
Switch - Fire Detection	8-75
Switch - Floor	8-27
Switch - High Pressure (Air Cond.)	19-13
Switch - Hourmeter	8-79
Switch - Hydraulic	7-44
	7-45C
Switch - Ignition	8-17
Switch - Ignition	10-1
Switch - Landing Light	7-1
Switch - Low Fuel	8-2
Switch - Low Pressure (Air Cond.)	19-13
Switch - Pitot Heat	9-25
Switch - Radar Altimeter	9-47
	9-49

S (Cont'd)

Switch - Remote (Pointer ELT) Kit	9-22
Switch - Rotor Brake	5-2
	5-6
Switch - Spotlight	8-21
	8-21B
	19-4
Switch - Test	8-75
	8-77B
Switch - Trim	7-1
	8-25
Switch - Vacuum (Fuel)	8-9B
Switch Assembly - Actuator	5-24
Switches - Duct Assembly	19-3
Switches - Intercom	8-25
	8-27
Switches - Panel	8-16
	10-1
	10-2
Switches - Tow Cart	15-1
	15-4
	15-11
	15-23
	15-25
	15-33

T

Tachometer	8-11
	10-5
Tail Light	8-29
	8-29A
Tail Rotor Assembly	6-7
	6-11
Tail Rotor Drive Shaft	5-13
	5-13A
Tail Skid	2-10
Tailcone Assembly	2-7
Tailcone Fairing	2-35
Tank - Fuel	8-1
	8-5
Tape - Aft Cowling	2-29
Tape - Airbox	4-30

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

T (Cont'd)

Tape - Cowl Panels (anti-chafe)	2-29 2-31 2-35 4-43
Tape - Aluminum	4-30 4-33 4-37 4-39B 4-39G 4-41 8-42 15-2
Tape - Exhaust System	4-22
Tape - Frame	2-5A 8-51F
Tape - Heater Installation	8-41
Tape - Tailcone	2-35
Tape - Windshield Installation	2-21
Tee - Hydraulic Lines	7-47 7-56
Tee - Hydraulic Lines	7-59 7-59B
Tee - Oil Pressure Sender	4-5
Tee - Pitot/Static Installation	8-71
Tee - Pop-Out Float Installation	11-17 11-17B 11-19
Tee - Primer Line	9-12 9-15
Tee Fitting - Blind Encoder Inst'l	9-31
Telatemp Indicator	1-1
Telatemp Indicator - MR Gearbox	5-1
Telatemp Indicator - Upper Bearing	5-11
Telatemp Indicator - TR Gearbox	5-21
Telatemp Indicator - Hydraulic Pump	7-47
Temperature Probe - Carburetor Air	4-27
Temperature Probe - Outside Air	8-75
Temperature Probe - Cylinder Head	8-76 8-77B
Temperature Sender - Oil	4-27 4-27B

T (Cont'd)

Temperature Sender - Oil	8-75 9-7
Terminal Block	8-15 10-3
Test - Switches	8-75 8-77B
Test Plug - Actuator	5-25
Throttle - Engine	4-9 4-19B
Thrust Washer - Actuator Bearing	5-23
Thrust Washer - MR Installation	6-3
Tie-Down - Main Rotor Blade	6-5
Tie-Down - Provision	9-43
Time Delay - Actuator	5-24
Time Delay - Low Fuel	8-11 10-6
Tip Cover (rotor blade)	6-1 6-1A 6-7
Tire - Ground Wheels	3-7 11-5C
Tire - Tow Cart	15-7 15-29
Tools - Maintenance	13-1 thru 13-7
Torque Tube - Cyclic Friction	7-5
Tow Cart	15-1 15-19
Transceiver	8-19
Transponder	8-19 9-31
Tray - Aft Interior	1-19
Tray - Battery (tow cart)	15-15 15-38
Tray Assembly - VCR	18-11
Trim Controller	7-3
Tube - Four Point Harness	9-35
Tube - Inner (ground handling wheel)	3-7 11-5C
Tube - Inner (tow cart wheel)	15-7 15-29
Tube - MAP Gauge	8-76

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

T (Cont'd)

Tube - Pitot/Static	8-71
	8-72
Tube - Push-Pull (main rotor controls)	7-19
	7-20
	7-21B
	7-21C
	7-21F
	7-27C
	7-63
Tube - Push-Pull (tail rotor controls)	7-31
	7-31B
	7-35
	7-37
	7-39
Tube - Push-Pull (throttle)	4-10
	4-19C
Tube Assembly - Heated Pitot	9-25
Tube Assembly - Skid	3-1
	11-1
	11-13
Tube Weldment - Jackshaft	7-11
	7-49
Ty-Rap - Carburetor	4-27
Ty-Rap - ELT Installation	9-21
	9-23B
Ty-Rap - Hydraulic Lines	7-43
	7-45B
Ty-Rap - Ignition Harness	4-26
	4-27
Ty-Rap - MRGB Cooling Hose	4-43
	7-45B
Ty-Rap - Nipple	8-35
	8-37
Ty-Rap - Nipple	8-39
	8-39B
	8-39D
Ty-Rap - Searchlight Installation	18-1
Ty-Rap - Spotlight (wires)	8-21
	8-21B
Ty-Rap - Swashplate Boot	7-13
Ty-Rap - Tow Cart Wiring	15-1
	15-20

T (Cont'd)

Ty-Rap - VCR Cables	18-11
	18-13

U

Union - Manifold Pressure Line	8-76
Union - Pitot/Static Installation	8-71
Upper Bearing - Clutch	5-11
Upper Frame (steel tube)	2-5
Upper Sheave	5-11

V

Valve - Float Tube Pressure Relief	11-1
	11-17
	11-17B
Valve - Fuel	8-9
Valve - Carb Heat	4-13
Valve - Thermostatic Bypass	4-27B
	9-8
Valve Assembly - Cabin Heater	8-42
Vane Assembly - Scroll	4-41
V-Belts	5-27
VCR Installation	18-11
Vent Doors - Cabin	2-14
	2-18
Vent Installation - Cabin	8-45
Vent Plug - Tail Rotor Gearbox	5-17
Vent Tube - Fuel	8-1
VU Meter	17-19

W

Warning Lights	8-11
	8-15
	10-1
	10-6
Warning Unit - Low RPM	8-16
	10-3
Washer - Main Rotor Installation	6-3
Washer - Thrust (Actuator)	5-23
Weather strip - Cabin Doors	2-13

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

ALPHABETICAL INDEX	PAGE NUMBER
--------------------	-------------

W (Cont'd)

Weather Strip - Cabin Doors	2-17
Web Assembly - Console	10-2
Weight - Balance	6-1
	6-8
Weldment - Jackshaft Assembly	7-11
Wheel - Ground Handling	3-7
	11-5
	11-5B
Wheel Assembly - Tow Cart	15-7
	15-29
Wind Deflector	9-45
Windshield Cover	2-21A
Windshield Sealant	2-21
Windshield Tape	2-21
Windshields	2-21
Wingnut - Battery Box	8-49
	8-51B
	8-51F
Wire Harness - Blind Encoder	9-31
Wire Harness - Cyclic	7-3
Wire Harness - Fuel Quantity Sender	8-1
Wire Harness - MR Gearbox	5-1
	5-2
Wire Harness - Power Booster	9-55
Wire Harness - Power Converter	8-19B
	8-19D
Wire Harness - Rotor Brake	5-5
Wire Harness - Tail Rotor Gearbox	5-17
Wire Harness - Trim Controller	7-3
Wrench - Float Valve	11-17

Y

Yoke - Drive System	5-3
	5-9
	5-13
Yoke - Flight Controls	7-20
	7-21B
	7-21F
Yoke - Main Rotor Gearbox	5-3
Yoke - Tail Rotor Gearbox	5-21
Yoke Assembly - Swashplate	7-13

Intentionally Blank