# CHAPTER 1

# **GENERAL**

<u>Section</u>	<u>Title</u>	<u>Page</u>
1-10	Introduction	1.1
1-20	R66 Maintenance Manual Revisions	1.1
1-30	R66 Maintenance Authorization	1.1
1-40	R66 Component Overhaul Authorization	1.1
1-50	Notations	1.2
1-60	Definitions and Abbreviations	1.2
1-70	Service Directory	1.4

25 OCT 2010 R66 Maintenance Manual Chapter 1 General Page 1.i

Intentionally Blank

Page 1.iiChapter 1 GeneralR66 Maintenance Manual25 OCT 2010

#### CHAPTER 1

#### **GENERAL**

#### 1-10 Introduction

The R66 Maintenance Manual contains instructions necessary for proper maintenance, servicing, and handling of the R66 helicopter. The R66 Instructions for Continued Airworthiness (ICA) include the R66 Maintenance Manual (MM), R66 Illustrated Parts Catalog (IPC), R66 Pilot's Operating Handbook (POH), R66 Service Bulletins (SB), R66 Service Letters (SL), RR300 Series Operation and Maintenance Manual (OMM), applicable Rolls-Royce technical publications, and applicable component manufacturer technical publications.

Service Bulletins may be issued by Robinson Helicopter Company (RHC), Rolls-Royce, or component manufacturers. Service Bulletin compliance is mandatory. RHC technical publications are available on the internet at: <a href="https://fast.aeromanager-online.com">www.robinsonheli.com/support.htm</a>. Rolls-Royce technical publications are available on the internet at: <a href="https://fast.aeromanager-online.com">https://fast.aeromanager-online.com</a>.

The R66 Maintenance Manual is formatted in Air Transport Association of America Specification No. 100 (ATA-100). Style, content, and structure deviates from ATA-100 when necessary for clarity, and for logic of presentation. A list of chapters, and a complete list of contents is located in the *Introduction*. Chapters are separated by tab dividers; chapter contents are listed in the chapter front pages.

#### **CAUTION**

Always read instructions completely before performing a task.

## 1-20 R66 Maintenance Manual Revisions

Before using the R66 Maintenance Manual, verify it consists of effective pages. A complete list of effective pages is located in the Revision Log in Chapter 100. When a new manual is purchased, complete and submit the Subscription Service Form located in the *Introduction*. Subscription owners receive publication revisions for a one-year period. Renew subscriptions annually. The revision status for all RHC technical publications is available on the internet at: www.robinsonheli.com/pubupdts.htm.

## 1-30 R66 Maintenance Authorization

Only appropriately certificated mechanics who have successfully completed a R66 factory-sponsored maintenance course, or are under <u>direct</u> supervision of the above-stated mechanic, are authorized to perform maintenance, repairs, or inspections on the R66 Turbine helicopter. Annual inspections of U.S.-registered light helicopters must be performed by holders of an Inspection Authorization (IA) certificate or by repair stations certificated by the Federal Aviation Administration (FAA). The daily preflight and some preventive maintenance may be performed by the above-stated mechanics, or by the pilot/owner after receiving appropriate instruction in accordance with the R66 Pilot's Operating Handbook and applicable aviation regulations.

# 1-40 R66 Component Overhaul Authorization

Only appropriately certificated mechanics who have successfully completed a R66 factory-sponsored component overhaul course, and who possess special tools and technical data supplied by RHC, are authorized to disassemble and overhaul or repair specific components.

25 OCT 2010 R66 Maintenance Manual Chapter 1 General Page 1.1

# 1-50 Notations

The following notations will be found throughout the manual:

#### NOTE

A NOTE provides emphasis or supplementary explanation.

#### CAUTION

Equipment damage can result if a **CAUTION** is not followed.

#### WARNING

Personal injury or death can result if a WARNING is not followed.

#### 1-60 Definitions and Abbreviations

Refer to R66 Pilot's Operating Handbook (POH) Section 1 for additional definitions and abbreviations.

#### A. Definitions

# 12 years:

With respect to a 12 year inspection or life-limit, 12 years means 12 years from the date of the factory-issued airworthiness certificate.

#### Annually:

With respect to an annual inspection, annually means within the preceding 12 calendar months.

# Datum:

An imaginary vertical plane from which all horizontal measurements are taken for balance purposes with the aircraft in level flight attitude. Refer to Section 6-20 for R66 datum location.

#### Empty Weight:

Empty Weight includes the weight of the airframe, powerplant, required and installed equipment, fixed ballast, hydraulic fluid, unusable fuel, and gearbox oil. Refer to R66 Turbine Type Certificate Data Sheet (TCDS) in Section 4-20. Refer to Equipment List/Weight and Balance Data Sheet (RF 134) and Weight and Balance Record in R66 POH Section 6 for installed equipment.

#### Life-Limited Part:

Refer to Section 4-10. Any part for which a mandatory replacement limit is specified in the type design, the Instructions for Continued Airworthiness, or the maintenance manual.

# Time in Service:

With respect to maintenance time records, *time in service* means the time from the moment an aircraft leaves the surface of the earth until it touches it at the next point of landing.

Page 1.2 Chapter 1 General R66 Maintenance Manual 25 OCT 2010

# 1-60 Definitions and Abbreviations (continued)

#### **B.** Abbreviations

14 CFR: Title 14 of the Code of Federal Regulations. The Federal Aviation Regulations (FARs) are part of the CFR.

AOG: Aircraft on Ground

ATA-100: Air Transport Association of America Specification No. 100

BL: Butt Line Station locations

CO: Carbon Monoxide

CRA: Component Return/Authorization

ELT: Emergency Locator Transmitter

EMU: Engine Monitoring Unit

FCU: Fuel Control Unit

FS: Fuselage Station locations

GCU: Generator Control Unit

HID: High Intensity Discharge

LBL: Left Butt Line Station locations

LED: Light Emitting Diode

MRDS: Main Rotor Driveshaft

MRGB: Main Rotor Gearbox

OEM: Original Equipment Manufacturer

PTG: Power Turbine Governor

R66 IPC: R66 Illustrated Parts Catalog

R66 MM: R66 Maintenance Manual

R66 POH: R66 Pilot's Operating Handbook

RHC: Robinson Helicopter Company

RR300 Series OMM: Rolls-Royce RR300 Series Operation and Maintenance Manual

SB: Service Bulletin

SL: Service Letter

TCDS: Type Certificate Data Sheet

TRDS: Tail Rotor Driveshaft

TRGB: Tail Rotor Gearbox

TS: Tailcone Station locations

WL: Water Line Station locations

25 OCT 2010 R66 Maintenance Manual Chapter 1 General Page 1.3

# 1-70 Service Directory

Contact:	Phone or Fax No.	Email or Web Address:		
General				
General	(310) 539-0508	www.robinsonheli.com		
General	(310) 539-5198 (fax)			
T 1 1 10 1				
Technical Support	(210) 520 0500			
General	(310) 539-0508	customerservice@robinsonheli.com		
Pat Cox	(310) 539-0508 ext. 212	ts1@robinsonheli.com		
Daniel Huesca	(310) 539-0508 ext. 214	ts2@robinsonheli.com		
Chris Sennett	(310) 539-0508 ext. 208	ts3@robinsonheli.com		
Maintenance Training				
Mallory Kohler	(310) 539-0508 ext. 151	courses@robinsonheli.com		
Maintenance Publications				
Lindsay Allen	(310) 539-0508 ext. 198	techpubs@robinsonheli.com		
Subscriptions				
Becky Applegate	(310) 539-0508 ext. 236	subscriptions@robinsonheli.com		
, 0				
Spare Parts				
General	(310) 539-0508	cs1@robinsonheli.com		
Cathy Obando	(310) 539-0508 ext. 211	cs2@robinsonheli.com		
Lea Bass	(310) 539-0508 ext. 216	cs3@robinsonheli.com		
Jeanne Shaw	(310) 539-0508 ext. 207	cs5@robinsonheli.com		
Sandra Aure	(310) 539-0508 ext. 245	cs6@robinsonheli.com		
Sandy Morales	(310) 539-0508 ext. 204	cs7@robinsonheli.com		
Dale Lynn Carbajal	(310) 539-0508 ext. 244	cs8@robinsonheli.com		
Repair Station				
John Hernandez	(310) 539-0508 ext. 263	rs1@robinsonheli.com		
JUHH HEHIAHUEZ	(3 10) 333-0300 EXt. 203			
Rolls-Royce Corporation				
Customer Support	(317) 230-2720	helicoptercustsupp@rolls-royce.com		
• •				

Page 1.4Chapter 1 GeneralR66 Maintenance Manual25 OCT 2010